



TM
SUMP BOSS

INSTALLATION & SERVICE MANUAL

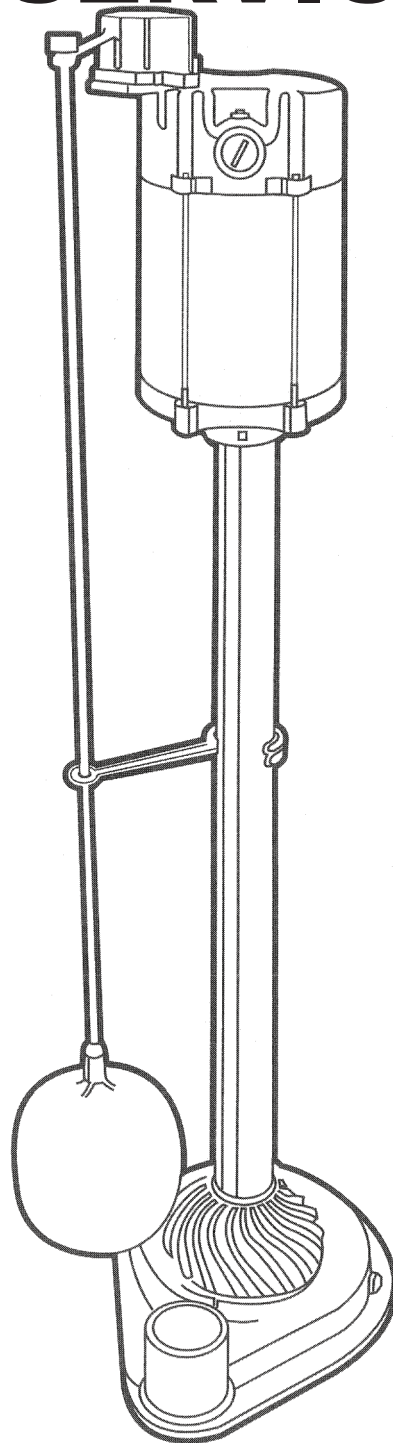

SUMP BOSS MODEL BP2000

**BATTERY-OPERATED
SUMP PUMP WITH
THE "SMART CHARGER"
ELECTRONIC CONTROLLER**

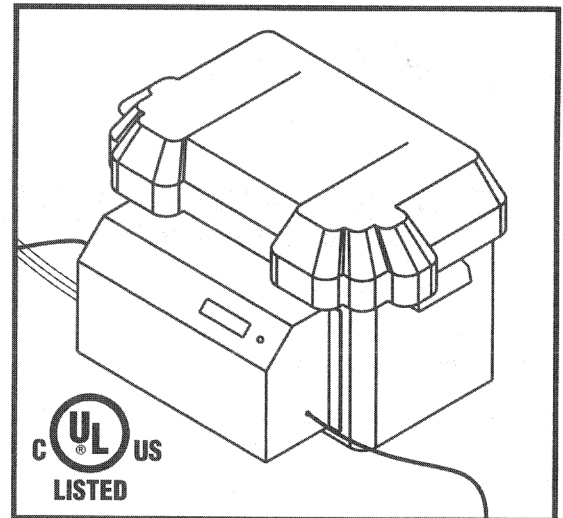

Patent Pending

SUMP BOSS

THE NEW STANDARD IN BATTERY OPERATED PUMPS & CONTROLS

INTRODUCTION

The SUMP BOSS is a battery operated sump pump that can be used as either a primary or standby pump. In the event of a power outage the pump will switch to the battery as a power source. When 115v power is again available the "Smart Charger" will return to line power automatically.

IMPORTANT SAFETY INSTRUCTIONS
READ AND SAVE THESE INSTRUCTIONS
– THIS MANUAL CONTAINS
IMPORTANT SAFETY AND OPERATING
INSTRUCTIONS FOR MODEL BP 2000
BATTERY CHARGER.

!!!WARNING!!!

BEFORE USING BATTERY CHARGER
READ ALL INSTRUCTIONS AND
CAUTIONARY MARKINGS ON BATTERY
CHARGER, BATTERY AND SUMP BOSS.

FAILURE TO HEED SAFETY
INSTRUCTIONS AND WARNINGS
COULD RESULT IN INJURY OR DAMAGE.

!!!WARNING!!!

Always disconnect batteries and disconnect SUMP BOSS from the AC power source before storing, handling or making any adjustments to the unit.

Use SUMP BOSS only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury to persons.

Do not sit or stand on SUMP BOSS.

Keep children away.

Do not place objects on SUMP BOSS or allow vents to become blocked.

The SUMP BOSS is designed to only handle clear water. DO NOT use in septic tanks to pump effluent or sewage pits to pump sewage.

Do not smoke, use sparkable electrical devices or open flame when working on this unit.

Do not install SUMP BOSS in locations classified as hazardous per N.E.C., ANSI/NFPA 70-1984.

!!!WARNING!!!

ELECTRICAL SHOCK HAZARD

This unit has not been evaluated for use outdoors – Never operate SUMP BOSS outdoors.

Never operate SUMP BOSS with battery enclosure open.

Never operate SUMP BOSS in a wet location.

Never operate SUMP BOSS in a location where liquid or moisture will come in contact with, splash on or drip on unit.

Sump Boss

OPERATION MANUAL

Dated: 9/17/09

Supersedes: None

Document No.: SBossO&M

Page 3 of 19

Do not insert or allow foreign objects to enter any ventilation or exhaust openings as this may cause electrical shock and/or a fire hazard.

!!!WARNING!!!

RISK OF ELECTRICAL SHOCK

In the event of a short circuit, grounding reduces the risk of shock by providing an escape wire for the electrical current. The SUMP BOSS must be properly grounded.

The SUMP BOSS is equipped with a cord having a grounding wire with an appropriate grounding plug. The plug must be used with an outlet that has been installed and grounded in accordance with all local codes and ordinances. The outlet must be the same configuration as the plug. Where a two-prong wall outlet is encountered, it must be replaced; contact a qualified electrician. To reduce the risk of electrical shock, the grounding plug blade must not be cut off at the plug. Do not use the three-prong plug with a two prong adapter. Do not attempt to defeat this safety feature.

Use the SUMP BOSS only with adequate wiring that is up to code.

Connect to properly grounded outlets only.

!!!WARNING!!!

RISK OF ELECTRICAL SHOCK

The SUMP BOSS is capable of and intended to generate electrical current when unplugged from the wall outlet or when the AC power is shut off.

Because the SUMP BOSS uses batteries, both the battery and the power cord must be disconnected to neutralize the SUMP BOSS. Failure to disconnect both the battery and the power cord will result in electrical shock sufficient to cause injury or death.

!!!WARNING!!!

BATTERY PRECAUTIONS IMPORTANT SAFETY INSTRUCTIONS. SAVE THESE INSTRUCTIONS

- A. Servicing of batteries should be performed or supervised by personnel knowledgeable of batteries and the required precautions. Keep unauthorized personnel away from batteries.
- B. When replacing batteries, use only models conforming to Battery Council International (BCI) 27 DC specifications for GROUP 27 DEEP CYCLE MARINE BATTERIES. Other types of batteries may burst causing personal injury and damage.
 - Die Hard Model 27524
 - Exide Model NC-27
 - Interstate Model SRM-27
 - Metropolitan Model 27t-36
 - NAPA Model 8270



C. CAUTION – Do not dispose of batteries in a fire. The batteries may explode.

D. CAUTION – Do not open or mutilate the batteries. Released electrolyte is harmful to the skin and eyes. It may be toxic.

E. CAUTION – A battery can present a risk of electrical shock and high short circuit current. The following precautions should be observed when working with batteries:

1. Remove watches, rings or other metal objects.
2. Use tools with insulated handles.
3. Do not lay tools or metal objects on top of batteries.
4. Wear safety goggles and a face shield.

F. CAUTION – The electrolyte is a dilute sulfuric acid that is harmful to the skin and eyes. It is electrically conductive and corrosive. The following procedures should be observed:

1. Wear full eye protection and clothing.
2. If electrolyte contacts the skin, wash it off immediately.
3. If electrolyte contacts the eyes, flush thoroughly and immediately with water. Seek medical attention.

4. Spilled electrolyte should be washed down with a suitable acid neutralizing agent. A common practice is to use a solution of approximately one pound (500 grams) bicarbonate of soda to approximately one gallon (4 liters) of water. The bicarbonate of soda solution can be added until the evidence of reaction (foaming) has ceased. The resulting liquid should be flushed with water and the area dried.

G. CAUTION – Lead acid batteries can present a risk of fire because they generate oxygen and hydrogen gas. The following procedures should be followed:

1. Do not smoke near batteries.
2. Do not cause flame or spark in battery area.
3. Discharge static electricity from body before touching batteries by first touching a grounded metal surface.

H. See Battery Manufacturers' installation manual for additional installation maintenance and safety instructions.




CARTON CONTENTS Figure A.


Your SUMP BOSS system is packaged in two separate cartons. The first is a tall carton labeled, "Battery Operated Pump". Inside this carton you will find the pump, complete with the float rod and ball for the primary switch. In a smaller box inside the tall carton you will find the auxiliary alarm/pump switch.

The second is a short carton labeled "Smart Charger". This will contain the electronics unit which is attached to the battery enclosure.


Verify that all the components are included and that they do not appear to be damaged. Remember you will also be required to supply a deep cycle marine battery described earlier in these instructions to complete the installation and proper operation of the SUMP BOSS.

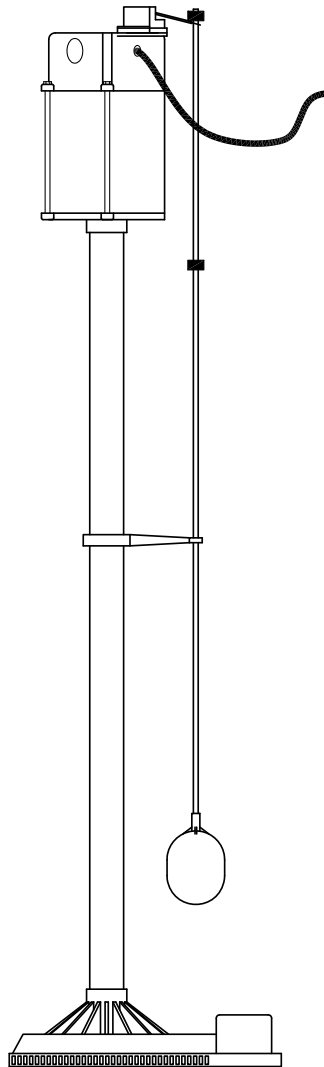

SUMP BOSS PUMP WITH
FLOAT ROD, 2 RUBBER STOPS
& FLOAT

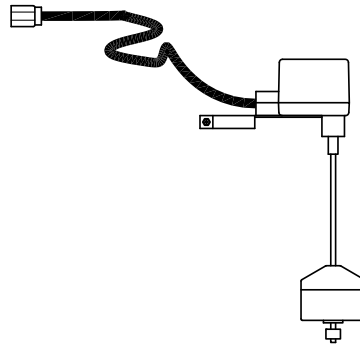

AUXILLARY PUMP/ALARM SWITCH

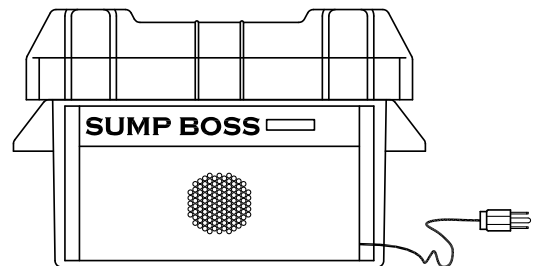

SMART CHARGER & BATTERY
ENCLOSURE

INSTALLATION INSTRUCTIONS

Proper Pump Placement. Figure B.


1. Remove the cover from your sump pit if it has one. (The cover will have to be modified after the installation is complete.)

2. CAUTION: Make sure that the motor remains dry at all times. It is not meant to get wet or be submersed in water.

3. Remove all debris from the sump pit.

4. Set the pump in the pit making sure that it is on a flat surface. (A brick or similar material can be used if necessary.)

5. Make sure that there is no interference between the SUMP BOSS switch and any objects in the basin or with the basin itself.

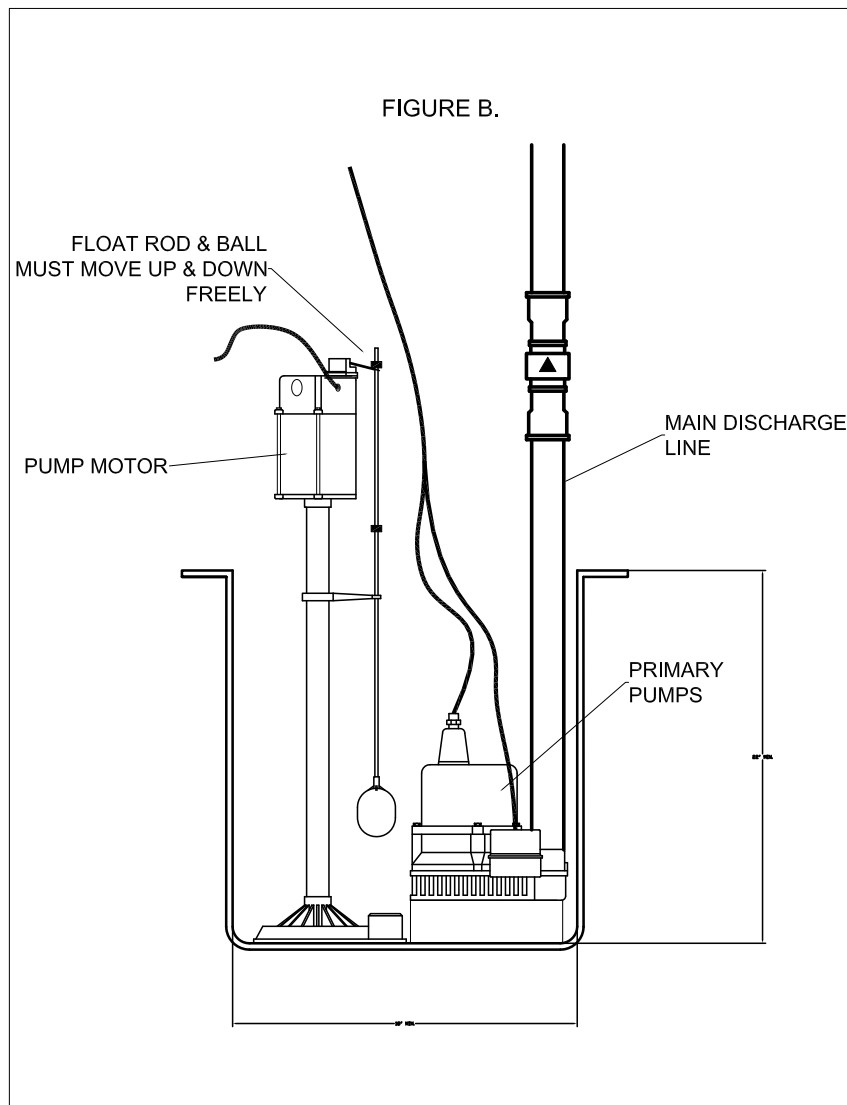

DISCHARGE PIPING AND AUXILIARY PUMP/ALARM FLOAT INSTALLATION

1. Discharge piping is to be installed per **FIGURE C**. Always make sure that an individual check valve is used for each pump to avoid re-circulation (which could cause flooding) during pumping.

Once the pump and piping are in place, mount the auxiliary float on the discharge pipe.

1. Undo the hose clamp on the switch bracket and put it around the discharge pipe. Tighten it only to a loose fit, at this time.

2. Adjust the auxiliary float height so that the float will not turn on this switch until the water level has surpassed the on level of the main SUMP BOSS float switch, which can be adjusted by sliding the lower rubber stop up or down on the float rod. This switch in turn should be adjusted to turn on at a higher level than your primary pump switch. See **FIGURE D** for an example.


3. Once you have your auxiliary switch set at the desired height position so that nothing in the basin will interfere with its operation, tighten up the mounting clamp.

CAUTION: Do not let the ends of the power cords with this unit get wet or submersed in the water during installation.

METHOD:1


FIGURE C

METHOD:2

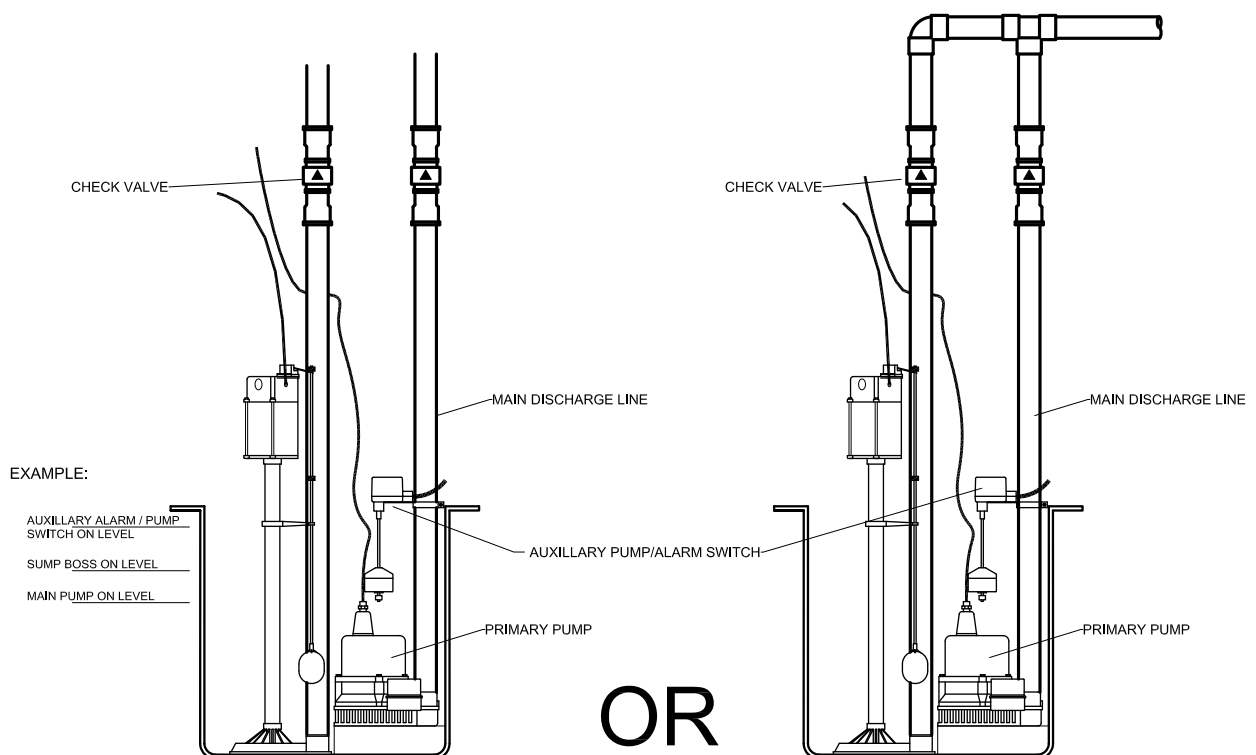

OR

ADJUSTING FLOAT LEVELS: EXAMPLE

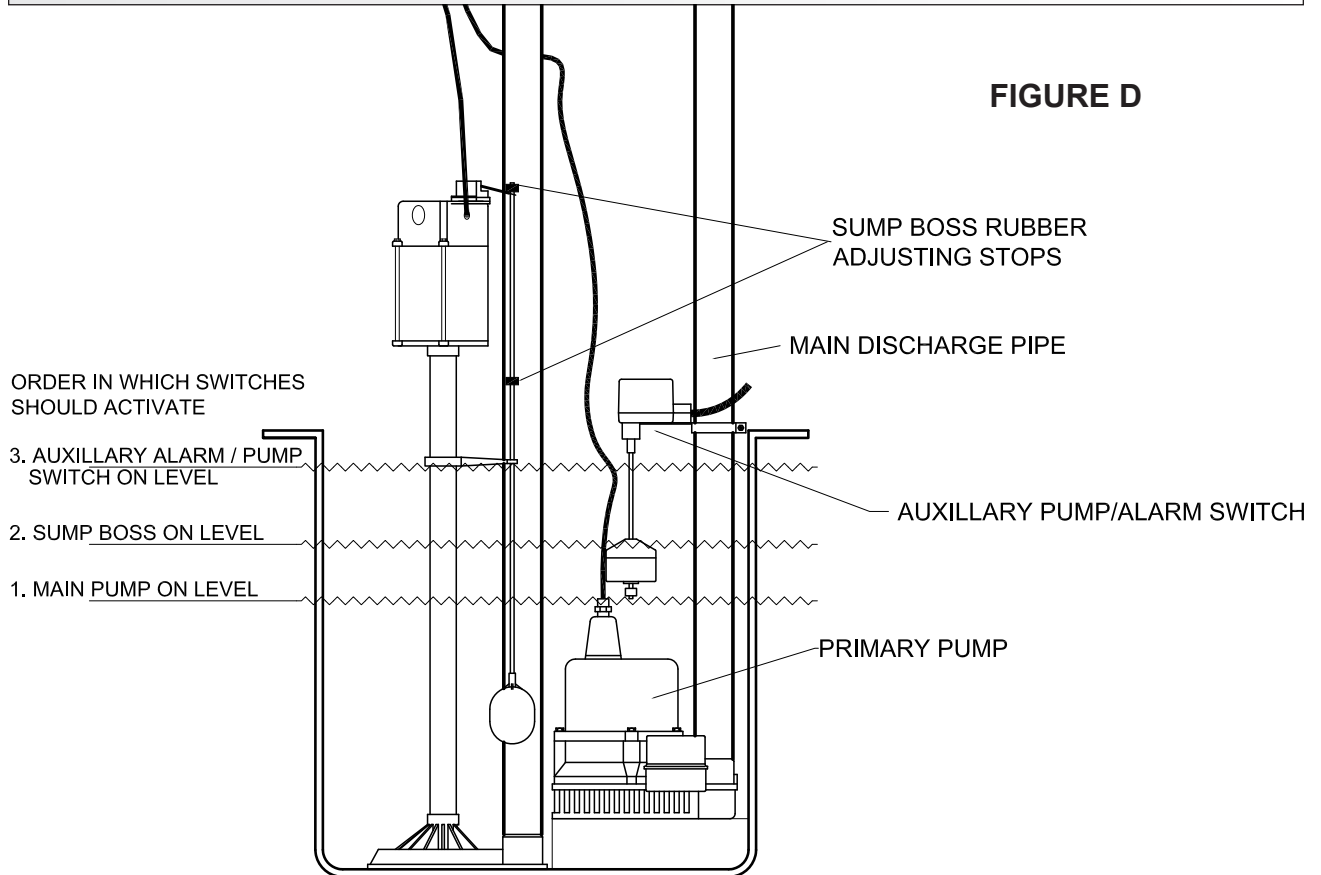

Batteries & Carbon Monoxide (CO) Detectors

All lead-acid batteries used by any back up pump system regardless of brand emit gases when charging. The emission of these gases can possibly produce an odd sulphur-like smell or sometimes will cause a nearby CO detector to needlessly sound an alarm. To prevent activation of CO detectors, move the battery as far from the detector as possible or provide a means for the gases to escape outdoors.

Read the instructions that came with your detector. This situation may be covered in the literature. Always follow the advice of the detector instructions first.

If the CO detector alarm sounds, do not assume that it is caused by the back-up pump's battery! You may have a real presence of CO! Take all steps necessary to insure personal safety.

After you are certain there is no CO present, (CO can be produced by a furnace, water heater or similar devices that use natural gas and/or produce combustion) then probably a battery being charged has produced the gases responsible. The manufacturer of the detector may be able to supply instructions to solve this problem.


“SMART CHARGER” PLACEMENT AND WIRING. Figures E & F

1. Find a suitable place to set your “Smart Charger” control unit. It is preferred that the unit either be put up on blocks or on a shelf designed to handle the weight of the unit and battery. **Figure E.**
2. Once the unit is in place, run the pump cord and the Auxiliary alarm/pump switch cord to the left side of the “Smart Charger” unit and plug them into the corresponding sockets. **Figures E & F**

NOTE: Make sure that the plugs are aligned properly before trying to plug them in. **DO NOT** try to force the plugs into the sockets.

3. Next remove the lid from the battery enclosure, and move the battery leads out of the way so that they do not accidentally touch the battery posts during installation.
4. Lower the battery into the enclosure making sure that the terminals are facing the front of the battery box. The left battery post should be the positive and the right should be the negative.

FIGURE E

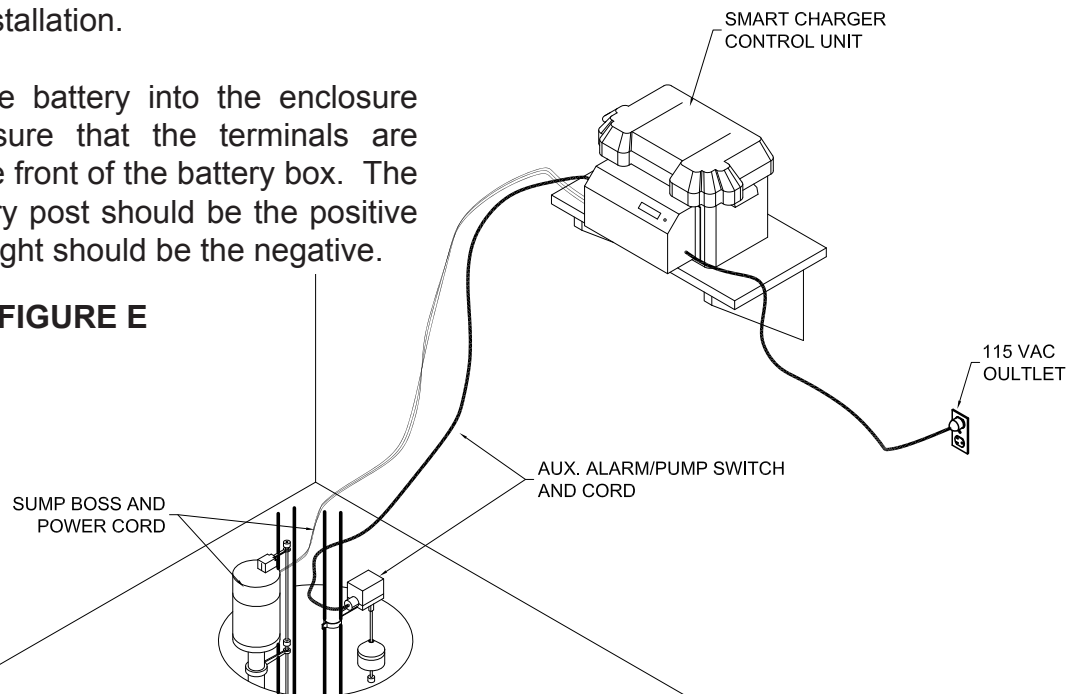


NOTE: If the polarity of the terminals does not match the above description, double check to make sure that you are using the proper type of deep cycle marine battery required for this unit.

5. Once you have determined that you have the proper battery, connect the black wire to the negative battery post. With that done, plug the unit into the designated 115v outlet. Now connect the red wire to the positive battery post.
6. At this time, the power light should be on and the LCD Display should read one of two things:



Either of these displays is normal.

See the following pages for system operation and display modes.

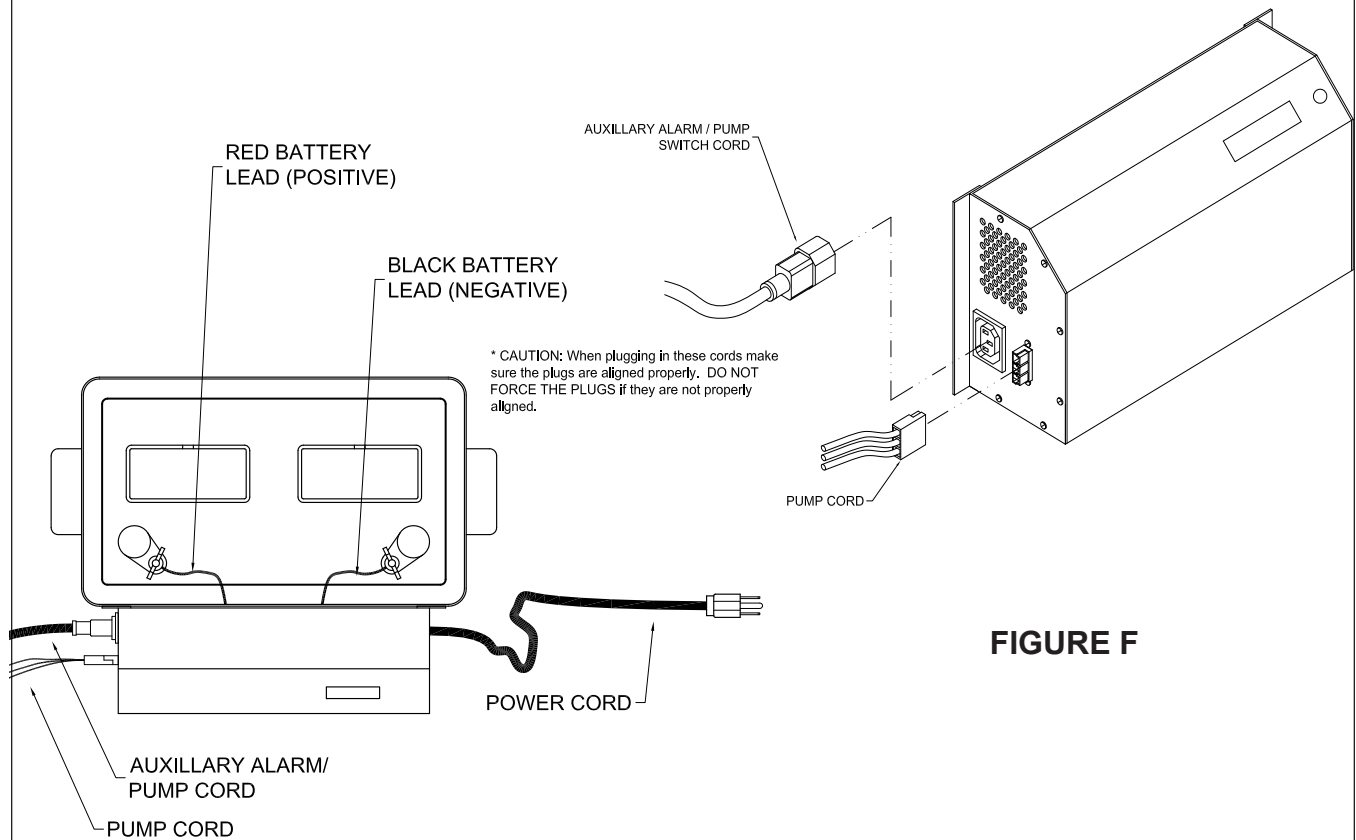


SUMP BOSS FINAL SYSTEM CHECKLIST. Figures E & F.

Before going any further, check the following items:

- Make sure the piping and check valve are tight and secure.
- Make sure that the SUMP BOSS primary float switch is set to go on at a higher level than the primary pump switch and that the auxiliary float switch is set to go on slightly above the SUMP BOSS switch. FIGURE D.
- Make sure the pump and auxiliary switch cords are plugged into their designated sockets properly. FIGURES E & F.
- Make sure that the battery leads are wired and tightened down properly, and that the battery cover is in place. Figure F.
- Make sure the unit is plugged into a 115v ac outlet and that there is power to that outlet.

Your SUMP BOSS is ready for final testing!

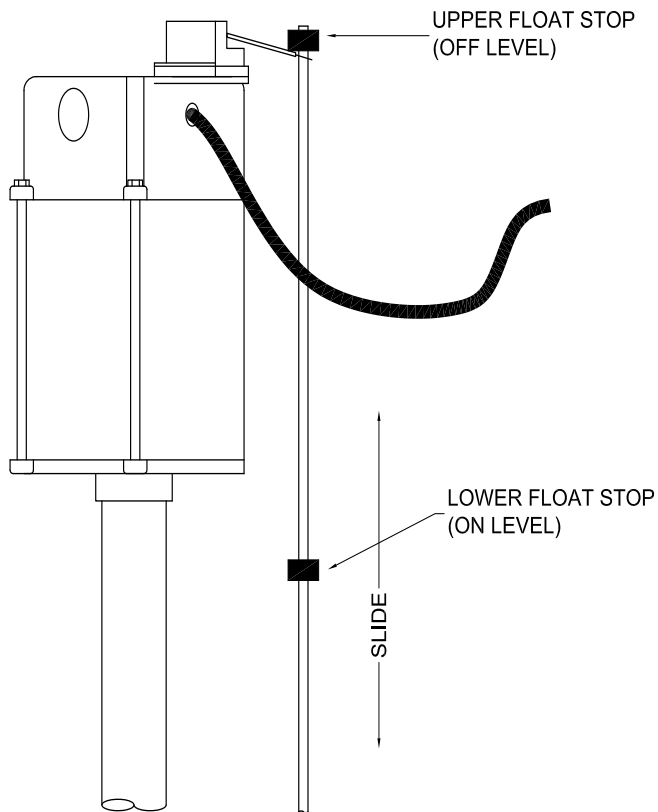

SUMP BOSS TESTING AND OPERATION

1. Unplug your primary pump and fill the pit with water until the SUMP BOSS starts pumping.
2. Check to make sure that the pump turns on and off at the desired levels. If it does not, adjust the rubber stops on the float rod by sliding them up or down to achieve the desired level. Figure G.
3. Manually lift the float on the Auxiliary alarm/pump switch to make sure it is properly set and working. If this switch needs further adjustment, loosen the hose clamp on the bracket and slide it up or down on the discharge pipe and re-tighten it at the desired level.


NOTE: During the testing you will hear the alarm sound. This is normal and will be explained in the next section.

CAUTION: DO NOT RUN THE PUMP DRY! SERIOUS DAMAGE MAY OCCUR!





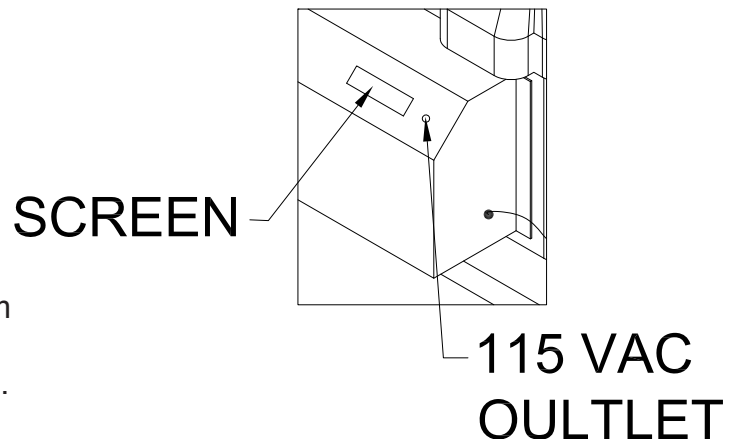

Always make sure there is sufficient water in the basin before running the pump.

OPERATION OF THE SUMP BOSS & "SMART CHARGER" SYSTEM.

The SUMP BOSS Battery Pump System is the most advanced system on the market today. Its microprocessor-based "Smart Charger" system, coupled with the LCD display and alarm, allows it to tell you in what state the system is at all times. The following is a step-by-step description of the LCD screens and alarm codes for the system during normal AC operation as well as during DC operation.



AC MODE (Green AC Indicator Light On) 115v AC (Line Power) Screens and Alarm Codes

ALARM	DISPLAY	EXPLANATION
NO ALARM		Screen One. This means that AC line power is present and the battery is fully charged. No alarms should sound.
NO ALARM		Screen Two. This means the microprocessor has determined the Battery is in need of a charge. This is perfectly normal and will occur from time to time. No alarm should sound.
1-SECOND BEEP AT EACH PUMP START -UP		Screen Three. This means that the pump is in use on the AT EACH PUMP 115v AC line. Each time the pump runs in this mode, the START-UP alarm will beep for one second.
CONTINUOUS BEEPING	  	<p>Screen Four. This screen will appear after Screen Three has been on for three seconds. It will remain on for five seconds before alternating back to Screen Three. These screens will only appear when the pump is actually running off of the battery. This screen will tell you the percent of battery life left in the DC mode under true pump load, within the actual useable battery voltage range. The reason this screen does not appear when the pump is idle is that you will not get a true reading when the battery is not being used, or under load.</p> <p>Screen Five. This means that either the primary or the auxiliary switch has turned on, but the pump is not drawing any current. When this occurs Screen Five will alternate with Screen Six every three seconds. This scenario will sound a continuous beeping alarm. Screen Six. This is the same scenario as mentioned on Screen Five. If this alarm occurs one of the following items have failed; check them in the following order:</p> <ol style="list-style-type: none"> 1. The pump cord is not properly plugged into the control unit. 2. The primary switch has failed. 3. The Smart Charger is damaged. This could be caused by a jammed impeller, or motor overheating.

ALARM

DISPLAY

EXPLANATION

4. The motor is damaged.
5. The brushes are worn out. This would most likely occur in an older unit.
See Figure H.

CONTINUOUS
BEEPING

*WARNING! BATTERY
NOT CHARGING*



*CHECK BATTERY
AND CONNECTIONS*

Screen Six. This means that the microprocessor has detected that the battery is not taking a charge. When this occurs Screen Six will alternate with Screen Seven in three second intervals. In most cases this means that either the battery is in need of replacement, it is low on water, or the battery terminals have excessive corrosion on them. In rare cases this may also mean that the Smart Charger is damaged for some reason. This scenario will sound a continuous beeping alarm.

Screen Seven. This is the same scenario as mentioned on Screen Six. Refer to above paragraph.

CONTINUOUS
BEEPING

*WARNING! HIGH!
WATER ALERT!*

Screen Eight. This means that the auxiliary alarm/pump switch has activated. When this occurs one of two things is happening:

1. The main pump switch has failed.
2. The water is coming into the basin faster than the pump can pump it out. This scenario will sound a continuous beeping alarm.

DC MODE (Green AC Indicator Light Off) 12VDC (Battery Power) Screens and Alarm Codes

ALARM

DISPLAY

EXPLANATION

NO ALARM

*SUMP BOSS
STANDBY MODE*



*POWER FAILURE
DETECTED!*

Screen One. This means that the line power has failed and that the Sump Boss is ready to operate off of the battery. When this occurs Screen One will alternate with Screen Two in three second intervals. This scenario will not sound an alarm.

Screen Two. This is the same scenario as mentioned for Screen One. Refer to above paragraph.

(TWO) 1
SECOND
BEEPS AT
EACH PUMP
START -UP

*SUMP BOSS
IS PUMPING*



*BATTERY CAPACITY
IS AT 000%*

Screen Three. This means that the primary switch has turned on and the pump is operating. Each time the pump runs in this mode the alarm will beep twice.

Screen Four. This screen will appear after Screen Three has been on for three seconds. It will remain on for five seconds before alternating back to Screen Three. These screens will only appear when the pump is actually running off of the battery. This screen will tell you the percent of battery life left in the DC mode under true pump load, within the actual useable battery voltage range. The reason this screen does not appear when the pump is idle is that you will not get a true reading when the battery is not being used, or under load

CONTINUOUS
BEEPING

*WARNING! PUMP
NOT OPERATING*



*CHECK PUMP
WIRE CONNECTIONS*

Screen Five. This means that either the primary or the auxiliary switch has turned on, but the pump is not drawing any current. When this occurs Screen Five will alternate with Screen Six every three seconds. This scenario will sound a continuous beeping alarm.

Screen Six. This is the same scenario as mentioned on Screen Five. If this alarm occurs one of the following items have failed; check them in the following order:

1. The pump cord is not properly plugged into the control unit.
2. The primary switch has failed.
3. The Smart Charger is damaged. This could be caused by a jammed impeller, or motor overheating.
4. The motor is damaged.
5. The brushes are worn out. This would most likely occur in an older unit. **See Figure H.**

CONTINUOUS
BEEPING



Screen Seven. This means that the auxiliary alarm/pump switch has activated. When this occurs one of two things is happening:

1. The main pump switch has failed.
2. The water is coming into the basin faster than the pump can pump it out. This scenario will sound a continuous beeping alarm. This may also be caused by a depleted battery in the DC mode. Turn on the pump and check % of battery life left.

This completes the operating scenarios of the **SUMP BOSS** system. As you can see, this product was designed to be extremely user-friendly and should always warn and assist you in resolving any problems that may occur during the life of this product.


!!!WARNING!!!

Before servicing this pump, always shut off the main power breaker and unplug the control unit. Make sure you are not standing in water and are wearing insulated protective-soled shoes. Under flooded conditions, contact your electric company or a qualified licensed electrician for disconnecting electrical service prior to pump removal.

BRUSH REPLACEMENT

CAUTION: Disconnect 115V line power and disconnect battery before servicing brushes!

FIGURE H

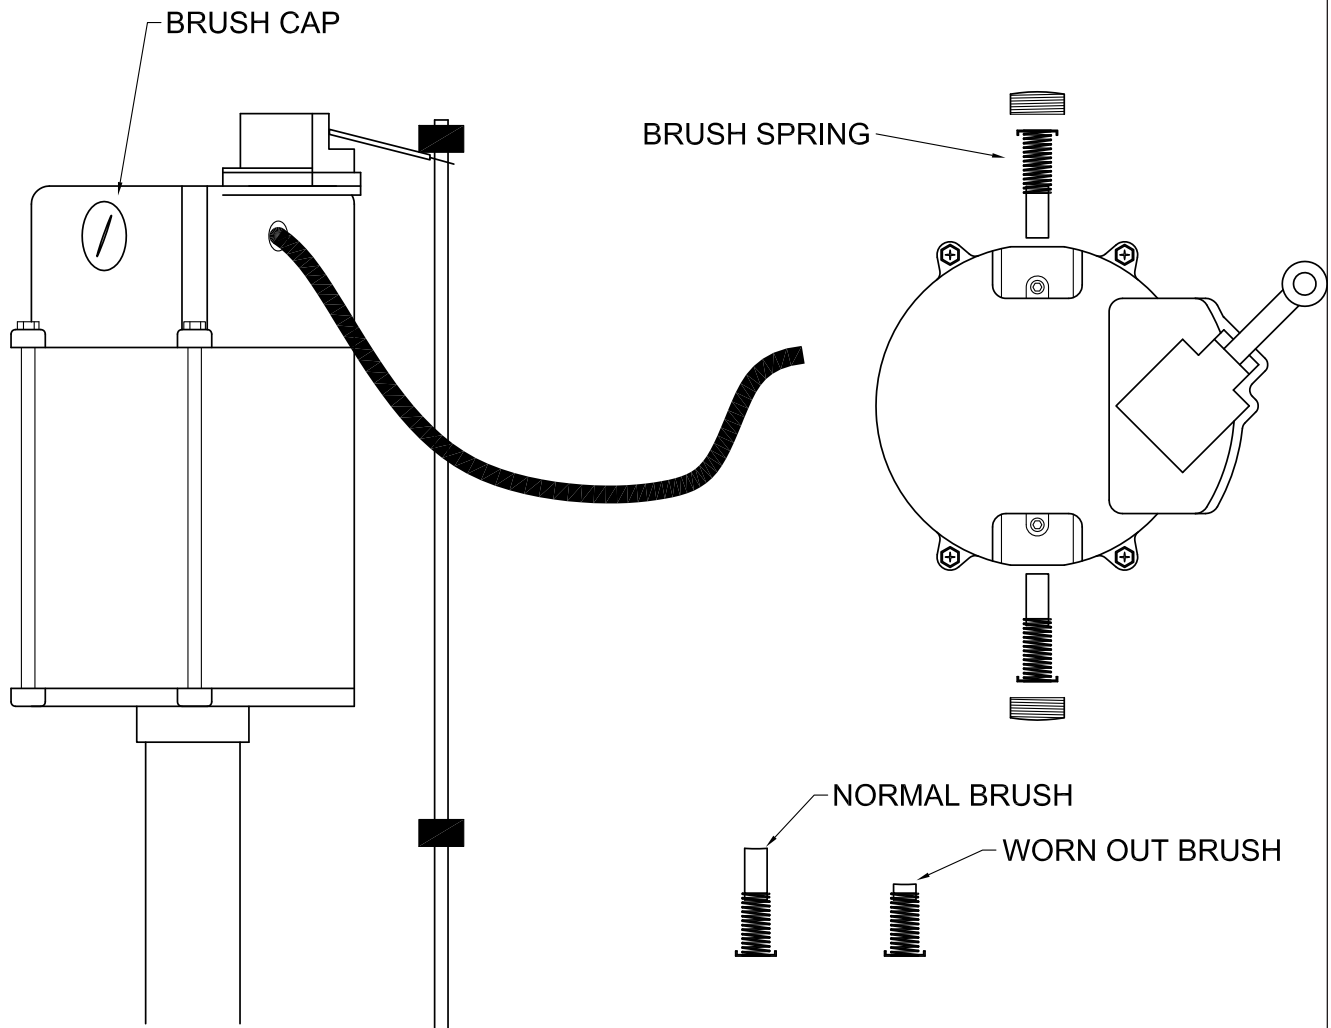

AUXILIARY POWER SYSTEM

INTRODUCTION:

Metropolitan SUMP BOSS Auxiliary Pump System, BP 2000, is recommended as a battery backup for residential sump pumps and is not intended for use as an auxiliary power system for appliances or other non-sump pump electrical devices.

The above noted Metropolitan product is guaranteed to be in perfect condition when it leaves our factory. During the time periods and subject to the conditions hereinafter set forth, metropolitan Pump Company, subsidiary of Metropolitan Industries, Inc. will repair or replace to the original user or consumer any portion of your new Metropolitan product which proves defective due to materials or workmanship of Metropolitan. At all times Metropolitan shall have and possess the sole right and option to determine whether to repair or replace defective equipment, parts or components. Damage due to lightning or conditions beyond the control of Metropolitan is NOT COVERED BY THIS WARRANTY. The warranty does not cover any unit which has been damaged either in transit or by misuse, accident or negligence.

THIS WARRANTY WILL NOT APPLY:

1. To defects or malfunctions resulting from failure to properly install, operate, or maintain the unit in accordance with printed instructions provided.
2. To failures resulting from abuse, accident or negligence.
3. To units which are not installed in accordance with applicable local codes, ordinances and good trade practices.
4. If unit is used for purposes other than for what it was designed and manufactured.
5. If unit is exposed to, but not limited to, the following: sand, gravel, cement, grease, plaster, mud, tar, hydrocarbons or hydrocarbon derivatives (oil, gasoline, solvents, etc.) or other abrasive or corrosive substances.
6. If power cord has been cut or the grounding prong has been removed.
7. If unit has been dismantled by customer.
8. Batteries not meeting the above specifications have been used.
9. Unit has been submerged in water.
10. Unit has been applied to products exceeding the maximum capacity of the unit, as specified in the instructions and on the unit front label.
11. Unit has been applied to the wrong voltage.



12. Unit has been used in an outdoor application.

13. Unit has been tampered with in any manner not described in the preceding instructions.

RETURNED OR REPLACED PRODUCT:

Any product to be replaced under the Warranty must be returned to Metropolitan Pump Company.

PRODUCT IMPROVEMENTS:

Metropolitan reserves the right to change or improve its products or any portions thereof without being obligated to provide such a change or improvement for units sold and/or shipped prior to such change or improvement.

DISCLAIMER:

Any oral statements about the product made by the seller, the manufacturer, the representatives or any other parties, do not constitute warranties, shall not be relied upon by the user, and are not part of the contract for sale. Seller's and manufacturer's only obligation, and buyer's only remedy, shall be the replacement and/or repair by the manufacturer of the product as described above. Neither seller nor the manufacturer shall be liable for any injury, loss or damage, direct, incidental or consequential damages for lost profits, lost sales, injury to person or property, or any other incidental or consequential loss arising out of the use or the inability to use the product, and the user agrees that

no other remedy shall be available to it. Before using, the user shall determine the suitability of the product for his intended use, and user assumes all risk of liability whatsoever in connection therewith. The warranty and remedy described in this limited warranty is an EXCLUSIVE warranty and remedy and is IN LIEU of any other warranty or remedy, expressed or implied, which other warranties and remedies are hereby expressly EXCLUDED, including but not limited to any implied warranty of MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE. Some states do not allow the exclusive or limitation of incidental consequential damages, so the above limitation or exclusion may apply to you. This warranty gives you specific legal rights, and may also have other rights which vary from state to state.

In the absence of other suitable proof of the installation date, effective date of the warranty will be based upon the date of manufacture plus one year.

Direct all Notices, etc. to:

**Service Department
Metropolitan Pump Company, Inc.,
37 Forestwood Drive
Romeoville, IL 60446-1343**

WARRANTY

1. Coverage and Term. Metropolitan Industries, Inc. (“**Metropolitan**”) warrants to the original purchaser (the “Buyer”) of each Metropolitan product (the “product”), that any part thereof which proves to be defective in material or workmanship within one (1) year from date of installation or 18 months from the date of manufacture, whichever comes first, will be replaced at no charge with a new or remanufactured part, F.O.B. factory. Buyer shall be responsible for all freight charges and all costs of field labor or other charges incurred in the removal and/or reinstallation of any product, part or component thereof.
2. Exclusions. **THE WARRANTY IS SUBJECT TO THE FOLLOWING CONDITIONS AND EXCLUSIONS:**
 - (a) The Warranty excludes products or workmanship which becomes defective as a result of: (i) earthquake, fire, storms, the elements or any other acts of God; (ii) normal wear and tear from use; (iii) accident, misuse, abuse or neglect ; (iv) modifications made by Buyer or any third party, other than **Metropolitan**; and (v) Buyer’s failure to properly install, maintain, service and/or operate the product under normal conditions and according to manufacturer’s instructions.
 - (b) **Metropolitan** shall not be responsible for, and the Warranty shall not cover, extended damage which occurs because of Buyer’s failure to notify **Metropolitan** promptly in writing of apparent defects.
 - (c) Any part or component designated as manufactured by anyone other than **Metropolitan** shall be covered only by the express warranty of the manufacturer thereof.
 - (d) The Warranty shall lapse upon Buyer’s failure to fully comply with the terms and conditions of its contract with **Metropolitan**, including Buyer’s failure to pay the purchase price for the product or any portion thereof. Buyer’s subsequent compliance with the terms and conditions of any such contract, will not cause the term of the Warranty to extend beyond the time period set forth above.
 - (e) No actions taken by **Metropolitan** to correct a defect in a product shall extend the Warranty beyond the period set forth above. **Metropolitan** shall not be obligated to remedy any defect, where otherwise required pursuant to the Warranty unless and until Buyer notifies **Metropolitan** in writing of the defect and then only if such notification is made prior to the expiration of the period set forth above.
3. Process of Claims and Repairs. **Metropolitan** agrees that if the product or any part or component thereof shall fail to conform to the terms of this Warranty, **Metropolitan** shall replace such nonconforming product, part or component at the original point of delivery and furnish instruction for its disposition. Any transportation charges involved in such disposition and all costs of field labor or other charges incurred in the removal and/or reinstallation of any product, part or component thereof shall be the responsibility of Buyer.
4. Limitation on Liability. Notwithstanding any provision to the contrary, **Metropolitan’s** entire liability under this Warranty shall not in the aggregate exceed, and Buyer’s exclusive and sole remedies are, to the extent permitted by law, shall be to secure replacement of the defective product. **UNDER NO CIRCUMSTANCES SHALL METROPOLITAN BE LIABLE UNDER THE WARRANTY FOR ANY INDIRECT, PUNITIVE, SPECIAL, EXEMPLARY, CONSEQUENTIAL OR INCIDENTAL DAMAGES (INCLUDING LOST PROFITS, REVENUE, USE OR ECONOMIC ADVANTAGE).**
5. Express Waiver of Any Other Warranties. **THE EXPRESS WARRANTY SET FORTH IN THIS WRITTEN WARRANTY IS THE ONLY WARRANTY MADE BY METROPOLITAN, OR ANY OTHER PARTY, IN CONNECTION WITH ANY PRODUCT PURCHASED FROM METROPOLITAN. NEITHER METROPOLITAN, NOR ANY OTHER PARTY, MAKES ANY OTHER EXPRESS OR IMPLIED WARRANTY WHICH IS NOT SET FORTH HEREIN, AND METROPOLITAN HEREBY DISCLAIMS AND BUYER HEREBY WAIVES ALL IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.**
6. Not Transferable. The Warranty may not be transferred and shall be void on the sale or other transfer of the product.
7. Products and Warranty Subject to Change. **Metropolitan** reserves the right to make revisions to its products and their specifications, and to revise this Warranty and related information without notice.

Register your product at

www.sumpro.com

